AIR COMPRESSOR TROUBLE SHOOTING GUIDE

1	Restricted air intake. Change air filter element, local or engine. Kinked air hose. Vacuum from engine							
	turbocharger when the compressor air intake is hooked to the engine air intake. Use inlet check valve							
	assembly.							
2								
	buildup in the drain hole. Excessive engine rotation may require a bottom drain on the compressor.							
3	Poorly filtered air. Check for defective intake components.							
4	Improper cooling. Restricted water flow, maximum coolant flow plumbed into the block and out the head							
	(opposite sides)							
5	No air dryer in the system. Drain reservoir tanks daily.							
6	Excessive duty cycle. Check for system leakage, inadequate compressor size for vehicle application.							
7	Excessive engine oil pressure and or crankcase pressure.							
8	Compressor worn out or defective							
9	Restricted air discharge line- build of oil heating to a hard carbon fibre.							
10	Loose pulley or worn drive gear components							
11	Lack of lubrication has created excessive bearing clearances.							
12	Mounting bracket vibration							
13								
14	Air dryer purge valve stuck open							
15	Defective unloader mechanism and / or governor							
16								
17	Discharge valve leakage. Excessive system leakage.							
18	Governor reservoir or unloader line restricted.							
19	Reservoir volume reduced. Drain water from system							
20	Brakes out of adjustment. Increased volume usage.							
21	Improper cooling. Restricted water flow, maximum coolant flow plumbed into block and out the head							
	(opposite sides)							
22	Insufficient air blast cooling. Clean cooling fans.							
23	Carbon comes from heat. Look for restrictions. Early engines did not utilize inner coolers. Compressor							
	inlet turbocharged to elevate temperatures.							
24	Compressor is turbocharged at temperatures/pressures and RPM above acceptable limitations. Consult							
	manufacture for parameters							
25	Brand of muti-grade motor oil; some oil brands allow carbon and varnish formation at lower temperatures.							

Passing Excessive Oil	1	2	3	4	5	6	7	8
Knock or Rattle	9	10	11	12	13			
Slow Air Buildup	1	6	8	9	10	14	15	16
Will Not Unload	15	17	18					
Excessive Load/Unload Cycling	15	17	19	20				
Runs Hot		16	20	21	22	23	24	
Premature Carbon Buildup	6	17	21	23	24	25		